# Remote Control User's Guide

## INSTRUCTIONS

This user's guide contains information on using the Fujitsu Remote Control with systems running Microsoft® Windows Vista® Home Premium or Windows Vista® Ultimate edition as the operating system.

You are strongly advised to read this manual to familiarize yourself with the features of the remote control.

### Determining Your System Configuration

Your remote control can be used with your computer whether you have a TV tuner or not. If you do not have a TV tuner, you can use the remote control to perform such operations as playing DVDs, listening to music, or viewing digital photo albums.

If you have a TV tuner installed (built-in, installed on PC Card, or connected externally via USB), you can use the remote to control the channel and volume, pause live TV, and record TV programs.

Figs. 1 through 3 illustrate the three ways your system can be configured:

- No TV Tuner
- Built-in TV Tuner with direct signal
- External TV Tuner

Note that the port locations and system configurations illustrated in this manual may differ from your actual configuration. See you system user's guide for actual location/configuration.

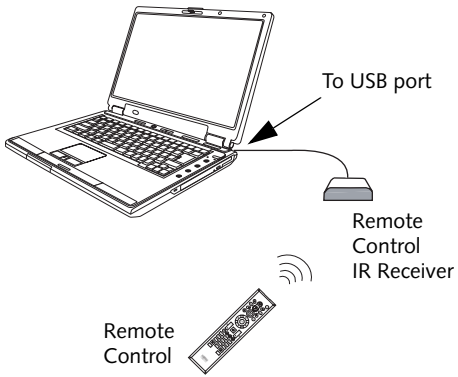


Figure 1. Configuration with no TV Tuner

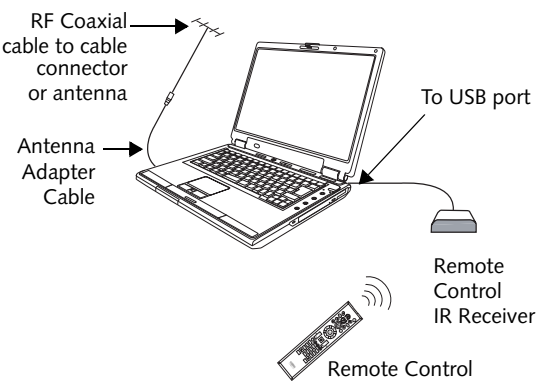


Figure 2. Configuration with TV Tuner and Direct Signal

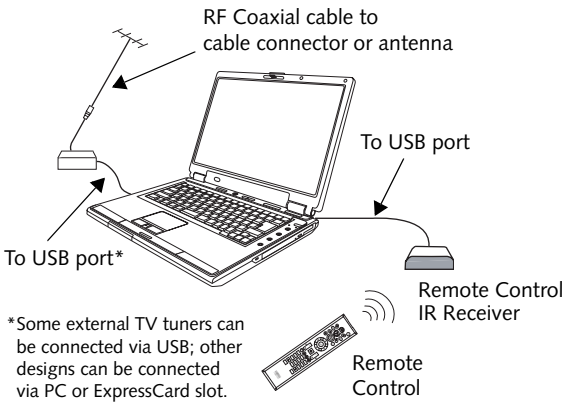


Figure 3. Configuration with External TV Tuner

## Items included in Remote Control Package

Before using the remote control, make sure the following items are included in the remote control package (Figure 5). Be sure to have these items at hand before you proceed to use the remote control:

- Remote control
- Two size AA alkaline batteries
- Optical remote control receiver



**Remote Control**



**Optical Remote Control IR Receiver**



**2 AA Alkaline Batteries**

Figure 4. Remote Control and Accessories

**Info**

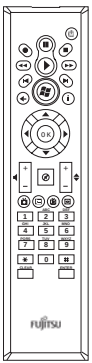- Use only the remote that came with this package when operating Vista Media Center.
- No cables or accessories other than those shown in Figure 5 are included. Additional accessories such as antenna cables, relay connectors, video cable, S-video cable, or audio cable are commercially available.
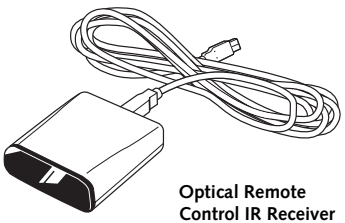
## Installing Batteries

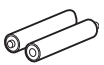**Warning**

- Properly insert batteries using the correct polarities (+, -). If they are incorrectly inserted, damage to the remote control could result.
- If you do not intend to use the remote control for an extended period of time, remove the batteries.

1. Open the lid of the battery compartment on the bottom of the remote control by pushing it in the direction shown in Figure 5.

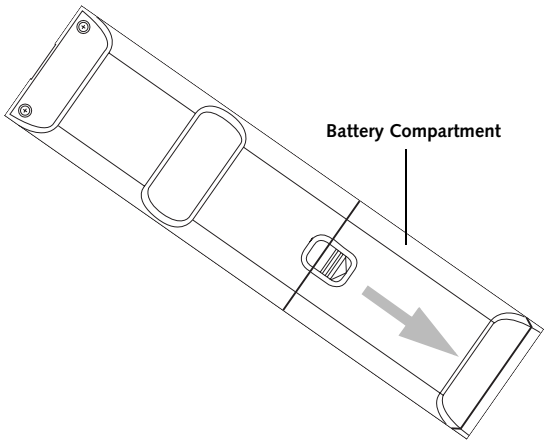


Figure 5. Opening the battery compartment

2. Insert the batteries with the polarities indicated on the bottom of the compartment and replace the cover.

In order to allow a suspended system to "wake up" using the remote control, you must ensure that it is enabled in the Windows Mobility Center. To do so, follow the instructions in "Setting up Mobility Center to use remote control" on page 6.

## Connecting optical remote control IR receiver

In order to allow a suspended system to "wake up" using the remote control, you must ensure that it is enabled in the Windows Mobility Center. To do so, follow the instructions in "Setting up Mobility Center to use remote control" on page 6.

Connect the USB connector on the end of the remote control to one of the USB ports on your computer (Figure 7). Note that the location of the USB port on your system may not be the same as that shown in the figure. Refer to the system user's guide for the location of the USB ports.



Figure 6. Connecting the optical remote control receiver

## Setting up Mobility Center to use remote control

In order for your remote control to work with your LifeBook, you must first ensure that it is able to "wake up" using a USB device. To do so, perform the following simple steps:

1. Click on Start -> Control Panel.
2. If you are in Classic View, double-click the Windows Mobility Center icon. If you are in Control Panel Home View, first click Mobile PC, then select Windows Mobility Center.

3. Find the tile labeled “Wake up by USB device”, and see if it is set to Enable or Disable.
4. If it is set to Enable, click the [Change] button. If it is set to Disable, no action is required.
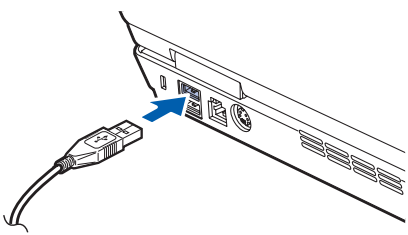
## Using the remote control

To use the remote control, you must use the remote control receiver included with the remote control. If your system has an infrared port, it cannot be used to operate the remote control.

Note the following when using the remote control:

- The receiver should be placed in a location where it is not obstructed. You should be able to point the remote control directly at the receiver. Keep the receiver out of direct sunlight, otherwise reception may prove faulty and the effective distance may be affected.
- If a plasma display, plasma TV, or halogen heater is located close to the device, the remote control may not work properly due to infrared interference. Relocate the devices if they interfere with the remote control operation.

Using the remote control is fairly intuitive. For specific information on using particular features, click the Start button to display the main menu. Scroll down to Settings and press the OK button. A submenu containing a variety of help topics appear. Click on the desired submenu to access related topics.

To exit the Help menu, click on the Start button to return to the main menu.

## Effective distance/location for remote control

(Figure 12)

Horizontal (left and right from center-point): Approximately 45 degrees

Vertical (left and right from center-point): Approximately 45 degrees

Distance from remote control to receiver: 3 meters max.

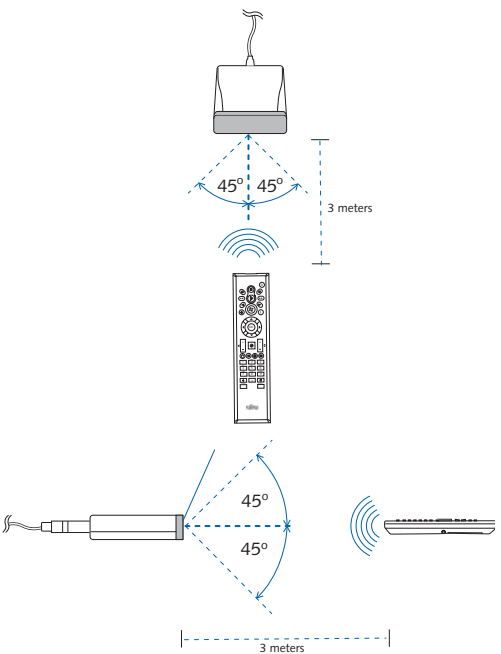


Figure 7. Effective distance/location of remote control

## Remote control features

Each button on the remote control is explained in this section.

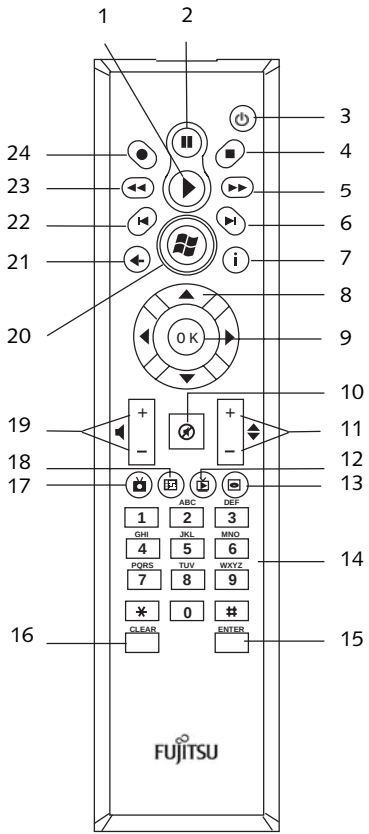


Figure 8. Remote control buttons

| No. | Purpose/ Icon | Purpose |
|---|---|---|
| 1 | Play | Pressing this button causes a selected recording to start playing. |
| 2 | Pause | If you press this button while a DVD, a recording, or live TV is playing, play will stop temporarily. Pressing this button while play has been paused, play will restart. |
| 3 | Power Button | Pressing this button while the computer is active will normally put the computer into standby. Pressing this button while the computer is in standby will take the computer out of standby.<br><br>**Note:** When a USB remote control receiver is connected to your system, the action invoked by the button on the remote control can be changed by going to the Power Options icon on the Control Panel. Select "Choose what the power button does" in the left pane. Select the desired action for the remote control power button from the available options. |
| 4 | Stop | Pressing this button while recording a program or while an audio CD or DVD video is being played, record/play will be stopped. |
| 5 | Fwd | When watching a recorded program or DVD, pressing this button will cause the program to fast forward. |

| No. | Purpose/ Icon | Purpose |
|---|---|---|
| 6 | Skip | Pressing this button will cause the program or DVD being viewed to jump to the next chapter. |
| 7 | More | Pressing this button will display all relevant information on replaying DVD-VIDEO, CD music, or recorded programs on screen. |
| 8 | Navigation Buttons | Pressing one of these buttons allow you to move the cursor left, right, up, or down. |
| 9 | **OK** | Pressing this button will select or execute the item where the cursor is placed. |
| 10 | Mute | Pressing the Mute button will turn off sound temporarily until you press it again. |
| 11 | Ch/Pg | When the (+) button or (-) button is pressed, the channel will switch to the next higher channel (+) or the next lower channel (-). This button will also go to the previous or next page of a menu or on-screen notification that is more than one screen high. |
| 12 | Live TV | Pressing this button will display in full-screen the program on the channel tuned in the last time. |
| 13 | DVD Menu | Pressing this button will display the main DVD menu. |
| 14 | Numeric/ Letter Keypad | Pressing the buttons allows you to input numbers or letters on the screen. |

| No. | Purpose/ Icon | Purpose |
|---|---|---|
| 15 | **ENTER** | Pressing this button will enter the letters or numbers input on screen. |
| 16 | **CLEAR** | Pressing this button will clear the numbers or letters input on the screen one by one. |
| 17 | Recorded TV | Pressing this button will display a list of all recorded programs on the screen. |
| 18 | Guide | Pressing this button will display the TV program guide on screen. |
| 19 | Volume Up/Down | When the (+) button or (-) button is pressed, the volume will switch to the next higher (+) or the next lower (-) volume level. |
| 20 | Start | Pressing this button will start up Media Center. Pressing this button while Media Center is running will display the Media Center Main Menu on the screen. |
| 21 | Back | Pressing the Back button returns you to the previously viewed screen. |
| 22 | Replay | When watching a recorded program or DVD, pressing this button will cause the program to go back 6-7 seconds per press. |
| 23 | Rew | When watching a recorded program or DVD, pressing this button will cause the program to rewind. |
| 24 | Record | Pressing this button while in television mode brings up a menu from which you can choose what and when to record. |

1250 E. Arques Avenue (M/S 122),
Sunnyvale, California 94085

For more information, call **1-877-372-3473** or visit our Web site at **www.shopfujitsu.com**.

For technical support call **1-800-8fujitsu** or send e-mail to: **8fujitsu@us.fujitsu.com**

Fujitsu and the Fujitsu logo are registered trademarks of Fujitsu, Ltd. Microsoft, Windows, and Windows Vista are trademarks or registered trademarks of the Microsoft Corporation. All other trademarks mentioned herein are the property of their respective owners. We cannot guarantee the accuracy of the contents of this document. We disclaim liability for errors, omissions or future changes.

© 2007 Fujitsu Computer Systems Corporation. All rights reserved.

B5FJ-5401-01EN-00